



Teaser de vendas SC 2 / 2016

TMA Pulse | Signature Collection

Montagem | Manuzeamento | TMA Pulse











Montagem | TMA Pulse

Lentes graduadas de Base 5, a ponta de alicate azul e o BLS 40/58/98/97

Tenha em conta que o BLS 40 só pode ser usado no TMA MUST, TMA Pulse, TNG.



BLS 40 „soft“	BLS 58 STANDARD	BLS 98 „long“	BLS 97 „short“
only TMA MUST / TNG 	Standard Glazing 	for very thick lenses 	for very thin lenses 
2,0 - 6,5 mm	lens size 2,0 - 6,5 mm	6 - 9,5 mm	1,3 - 3 mm
			
∅ 1,4 mm	∅ 1,4 mm	∅ 1,4 mm	∅ 1,4 mm

Inclinação I TMA Pulse



Segure a charneira com o alicate e dobre na direcção pretendida

Abertura da haste | TMA Pulse

Alargar



Abertura da haste | TMA Pulse

Reduzir




Redução da haste | Wes Gordon




Retire os terminais



Corte com o alicate

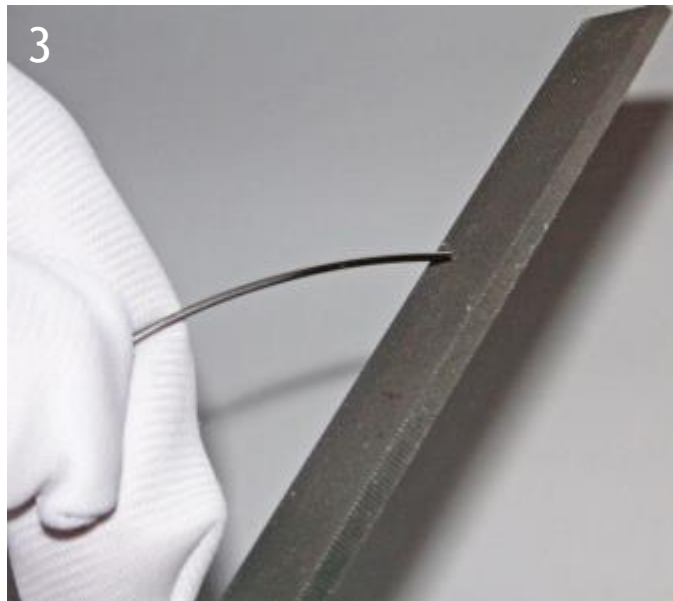


Lime as pontas

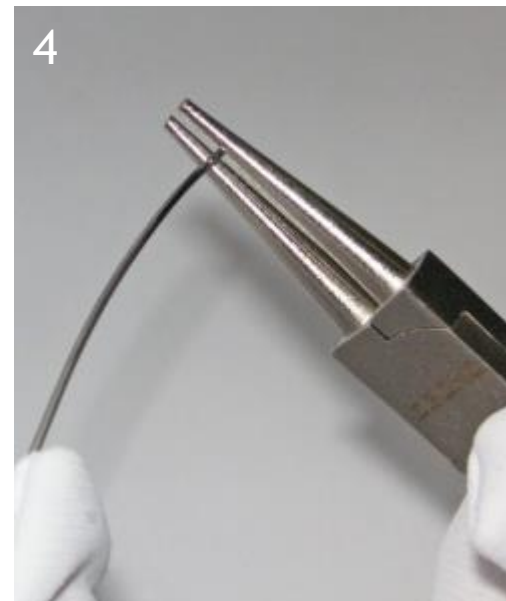

Aperte a parte metálica com o alicate redondo nas pontas.

Coloque o terminal.

Por favor, não faça isto!

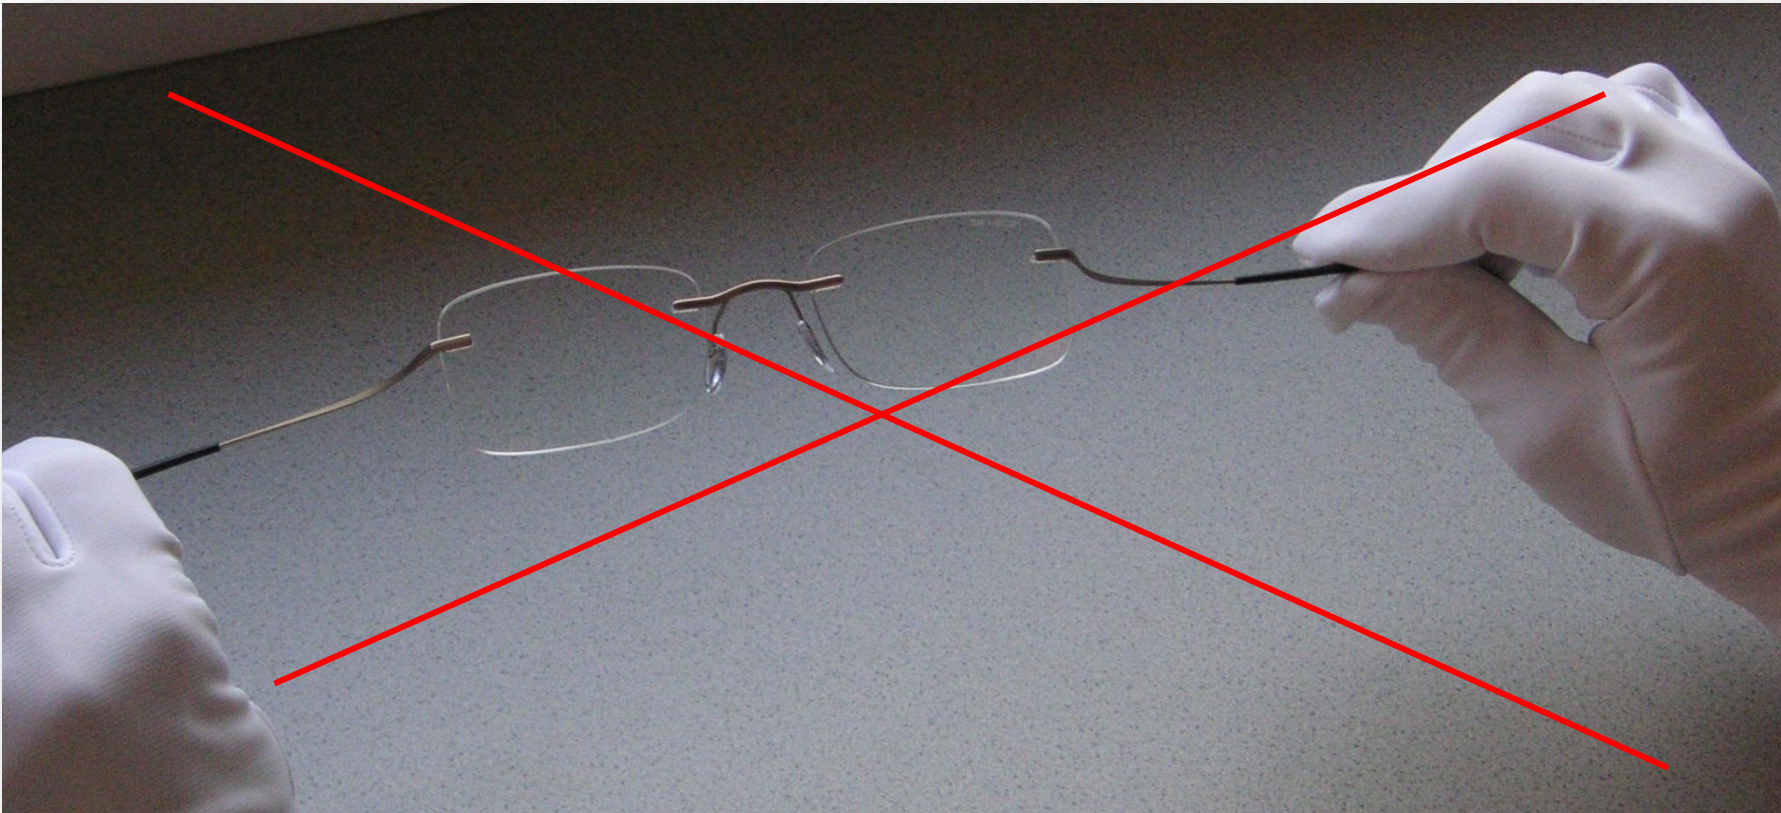

1. Em caso algum a haste de titânio deve ser esticada ou torcida!
2. As rupturas microscópicas podem causar quebra das hastes.